

## Product information

### mzr-6305 · High performance pump series



#### Description

The micro annular gear pump mzr-6305 covers the flow rate range 0.024-144 ml/min. To the main assets of the device belong high precision, low pulsation, low volume dosage even of non-lubricating liquids or at high pressures, compact design and an integrated microcontroller. The pump allows dosage in a broad viscosity range and shows small, economic dimensions. The mzr-6305 targets applications in industrial production and process technology. The pump has been designed for continuous delivery and discrete dosage of water, watery solutions, solvents, methanol, oil, lubricants, adhesives, inks and paints as well as other high viscosity liquids.

#### Advantages

- High dosage precision  
precision CV < 1 % at low volumes
- High differential pressures  
achievable even for low viscosity liquids
- Compact dimensions  
length 156 mm, including controller
- Broad viscosity range  
methanol, water, solvents, adhesives, grease, gel
- Low pulsation delivery, low shear stress  
rotary micro annular gear technology
- Long service life  
wear-resistant tungsten carbide
- Precision motor and sophisticated control  
DC-servomotor with integrated microcontroller

#### Applications

- Chemical processing
- Industrial and plant engineering
- Packaging
- Medical and pharmaceutical industry
- Mini plant technology
- Spray technology
- Dispensing of adhesives
- Ink and paint dosage
- Vacuum applications

## Technical data

|                             |   |
|-----------------------------|---|
| Flow rate                   | 0.024 - 144 ml/min  |
| Smallest dosage volume      | 15µl  |
| Displacement volume         | 24µl  |
| Differential pressure range | 0 – 40 bar (580 psi)  |
| Maximum inlet pressure      | 5 bar (73 psi)  |
| Liquid temperature range    | -5 ... +60 °C (-20 ... +150 °C *) +23 ... +140 °F (-4 ... +302 °F *)  |
| Viscosity range             | 0.3 - 25,000 mPas   |
| Precision CV                | < 1% (Coefficient of variation CV)  |
| Velocity range              | 1 - 6,000 rpm   |
| Fluid connection            | 1/8" NPT internal thread, lateral optional: 1/8" NPT internal thread, frontal   |
| Wetted parts                | stainless steel 316L (1.4404, 1.4435), tungsten carbide Ni-based; shaft seal: graphite-reinforced PTFE, stainless steel 316L; static seals: FPM, optional: EPDM, FFPM |
| Motor                       | DC-servomotor 24 V DC, 44 W   |
| Controller                  | integrated 16-bit microcontroller   |
| Interface                   | 0–10 V, RS-232, 1 digital input/output  |
| Dimensions (L x W x H)      | 156 x 50 x 69 mm  |
| Weight                      | approx. 1080g   |
| Remarks                     | * depending on accessories, Customized solutions on request.  |


### Notice

Even if single parameters are within the indicated performance range of technical data, certain parameter combinations may not be achievable. Single parameters may exceed their indicated performance range under adequate circumstances. For detailed evaluation please contact HNP Mikrosysteme. Actual performance may vary. Specifications are subject to change without notice.


## Accessories

- Reduction gear
- Reservoir Plastic
- Double shell heating module
- Heat insulation module
- Electrical heating module
- mZR-Touch Control

## Dimensions

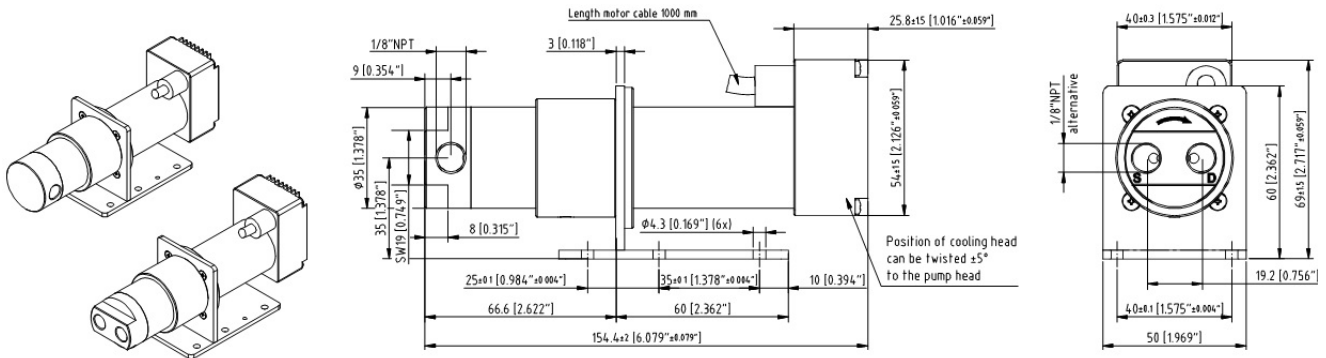

## Flow charts

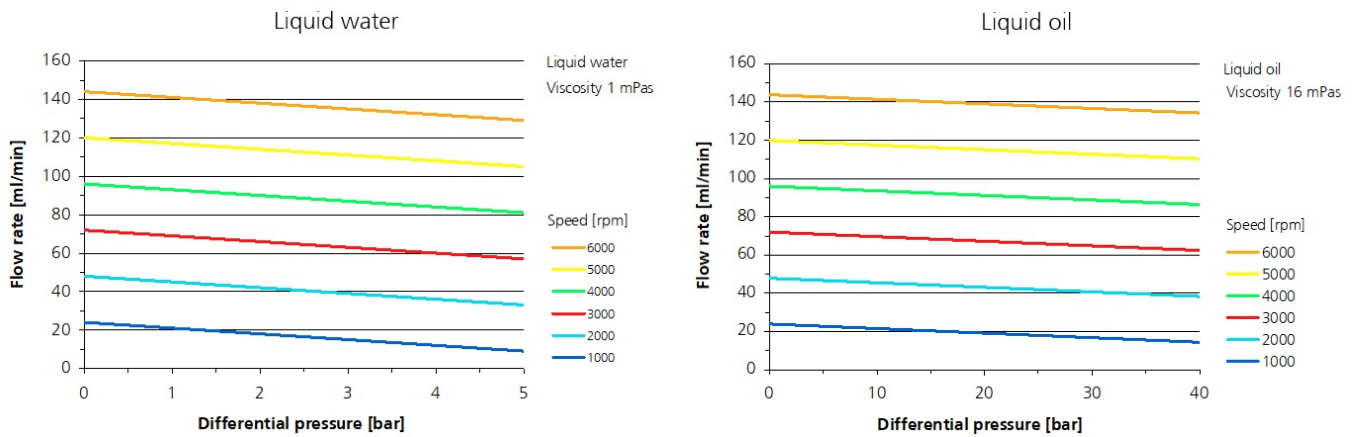

## Patents and trademarks

Micro annular gear pumps (and housings) are protected by assigned patents: EP 1 354 135 B1; US 7,698,818 B2; DE 10 2011 001 041 B4; CN 103 348 141 B; US 10,012,220 B2; CN 103 732 921 B; US 9,404,492 B2; US 6,520,757 B1.  
 HNPM<sup>®</sup>, mzr<sup>®</sup>, MoDoS<sup>®</sup>,  $\mu$ -Clamp<sup>®</sup>,  $\mu$ Dispense<sup>®</sup>, Centifluidic Technologies<sup>®</sup>, LiquiDoS<sup>®</sup>, smartDoS<sup>®</sup>, ColorDoS<sup>®</sup> are registered German trademarks of HNP Mikrosysteme GmbH.

## Contact

HNP Mikrosysteme GmbH  
 Bleicherufer 25  
 19053 Schwerin  
 Germany

T +49 385 52190-300  
 F +49 385 52190-333  
 info@hnp-mikrosysteme.de

Last update 2019/08